


THORN

Beta 3 / Beta Cell Plasterboard Kit

| Product Description | SAP code | Length | Width | Height |
|-------------------------------------|-----------------|-------------|------------|-----------|
| BETA 3 PLASTERBOARD KIT Q600 | 96635030 | 630 | 630 | 71 |
| BETA 3 PLASTERBOARD KIT Q625 | 96635032 | 655 | 655 | 71 |
| BETA 3 PLASTERBOARD KIT 3x12 | 96635447 | 1235 | 335 | 71 |

[CZ] Montážní návod
 [DE] Montageanleitung
 [DK] Monteringsvejledning
 [EE] Paigaldusjuhend
 [FI] Asennusohje
 [FR] Notice de montage
 [HU] Szerelési útmutató
 [IT] Istruzioni di montaggio

[LT] Montavimo Instrukcijos
 [LV] Instalācijas instrukcija
 [NO] Monteringsanvisning
 [PL] Instrukcja montażu
 [RU] Инструкция по монтажу
 [SE] Installationsanvisning
 [UK] Installation Instructions

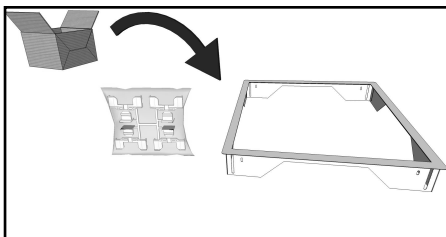

1

96635030
L=612 mm

96635032
L=635 mm

96635447
 (only applicable for Beta 3)
L=1205/305 mm

